BMCI300SS

30 Litre, Combination
Built-in Microwave Oven
with Convection & Grill

INSTRUCTION MANUAL

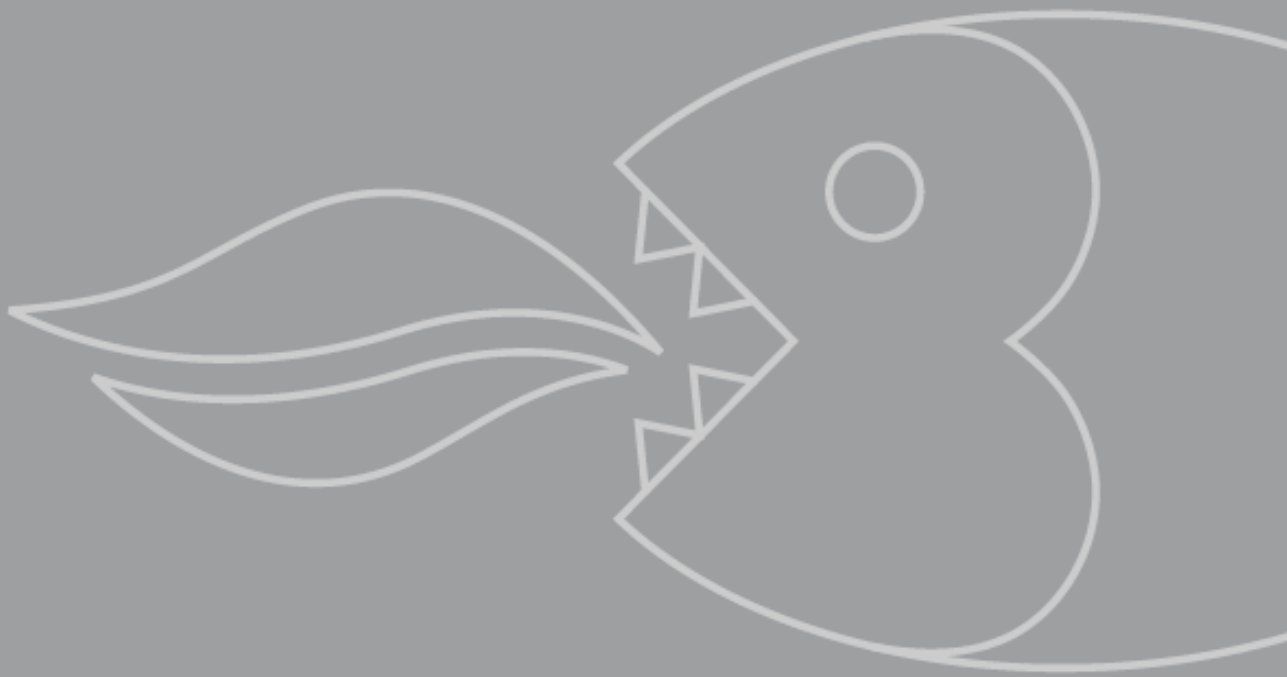

Baumatic®

MODEL: BMCI300SS

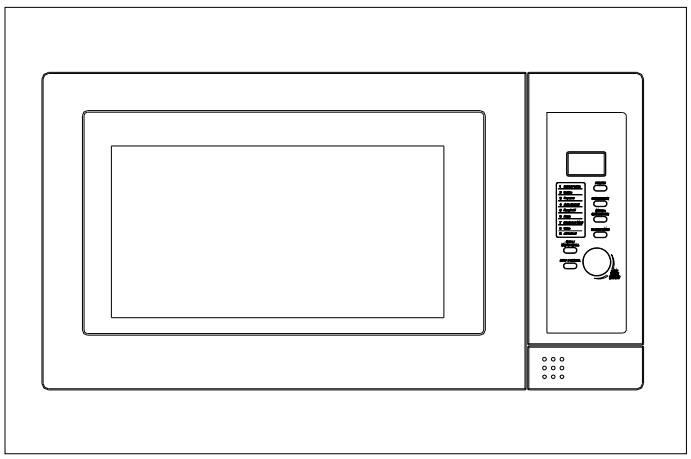

Microwave Oven Owner's Manual

Please read these instructions carefully before installing and operating the oven.

Record in the space below the SERIAL NO. found on the nameplate on your oven and retain this information for future reference.

SERIAL NO.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to adjust or tamper with the safety interlocks.

2. Do not place any object between the oven front face and the door or allow food or cleaner residue to accumulate on sealing surfaces.

3. Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
   - **a.** Door (bent),
   - **b.** Hinges and latches (broken or loosened),
   - **c.** Door seals and sealing surfaces.

4. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

CONTENTS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY 2
IMPORTANT SAFETY INSTRUCTIONS 2
SPECIFICATIONS 3
INSTALLATION 3
RADIO INTERFERENCE 3
GROUNDING INSTRUCTIONS 5
MICROWAVE COOKING PRINCIPLES 5
BEFORE YOU CALL FOR SERVICE 5
UTENSILS GUIDE 5
PART NAMES 5
CONTROL PANEL 6
HOW TO SET THE OVEN CONTROLS 7
- Setting digital clock 7
- Set the timer 7
- Microwave cooking 7
- Quick start 8
- Grill/micro+grill 8
- Convection 8
- Micro+Convection 9
- Auto cook 9
- Jet defrost 10
- MULTI-STAGE COOKING 10
- Child lock 10
- Automatic protection mechanism 11

CLEANING AND CARE 12

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance basic safety precautions should be followed, including the following:
WARNING: To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapours in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. Do not operate the oven when empty.
4. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard
5. WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
6. Warning: When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
7. To reduce the risk of fire in the oven cavity:
   a. When heating food in plastic or paper container, check the oven frequently to the possibility of ignition.
   b. Remove wire twist-ties from paper or plastic bags before placing bag in oven.
   c. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
   d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
8. WARNING: Liquid or other food must not be heated in sealed containers since they are liable to explode.
9. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
10. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
11. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
12. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
13. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
14. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
15. Utensils should be checked to ensure that they are suitable for use in microwave oven.
16. **WARNING**: It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
17. This product is a Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purpose.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.

SPECIFICATIONS

Power Consumption:	230V-240V~50Hz, 1400W(Microwave)
	1250W(Grill)
Power Consumption (Convection)	2200V
Microwave Power Output:	900W
Operation Frequency:	2450MHz
Outside Dimensions:	354mm(H)×539mm(W)×390mm(D)
Oven Cavity Dimensions:	240mm(H)×354mm(W)×358mm(D)
Oven Capacity:	30Litres
Cooking Uniformity:	Turntable System
Net Weight:	Approx. 18.4kg

INSTALLATION

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING**: WARNING: Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
6. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
7. The socket must be readily accessible so that it can be easily unplugged in an emergency.
8. Do not use the oven outdoors.

RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment.

When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

WARNING Improper use of the grounding plug can result in a risk of electric shock.

Note:

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are coloured in accordance with the following code:

Green and Yellow = EARTH

Blue = NEUTRAL

Brown = LIVE

MICROWAVE COOKING PRINCIPLES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwaving to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the centre of the dish to the outside.

BEFORE YOU CALL FOR SERVICE

If the oven fails to operate:

1. Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
2. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
3. Check to ensure that the control panel is programmed correctly and the timer is set.
4. Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

UTENSILS GUIDE

1. The ideal material for a microwave utensil is transparent to microwave, it allows energy to pass through the container and heat the food.
2. Microwave can not penetrate metal, so metal utensils or dishes with metallic trim should not be used.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
5. Narrow strips of aluminium foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.

The list below is a general guide to help you select the correct utensils.

COOKWARE	MICROWAVE	GRILL	COMBINATION
Heat–Resistant Glass	Yes	Yes	Yes
Non Heat–Resistant Glass	No	No	No
Heat–Resistant Ceramics	Yes	Yes	Yes
Microwave–Safe Plastic Dish	Yes	No	No
Kitchen Paper	Yes	No	No
Metal Tray	No	Yes	No
Metal Rack	No	Yes	No
Aluminum Foil & Foil Containers	No	Yes	No

PART NAMES

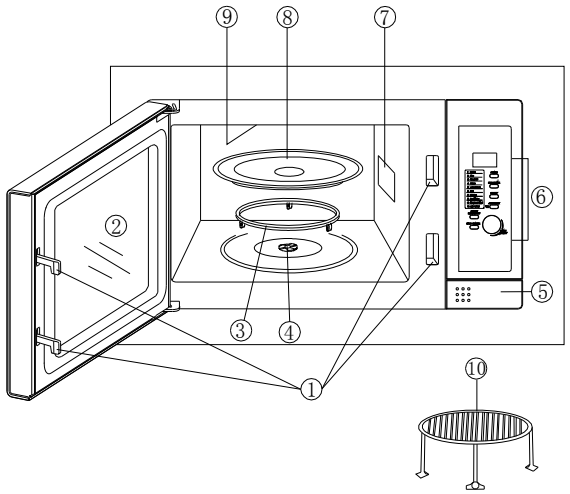

1. Door Safety Lock System
2. Oven Window
3. Roller Support
4. Shaft
5. Door Release Button
6. Control Panel
7. Wave Guide
8. Glass Tray (Turn table)
9. Grill Heater
10. Metal Rack

CONTROL PANEL

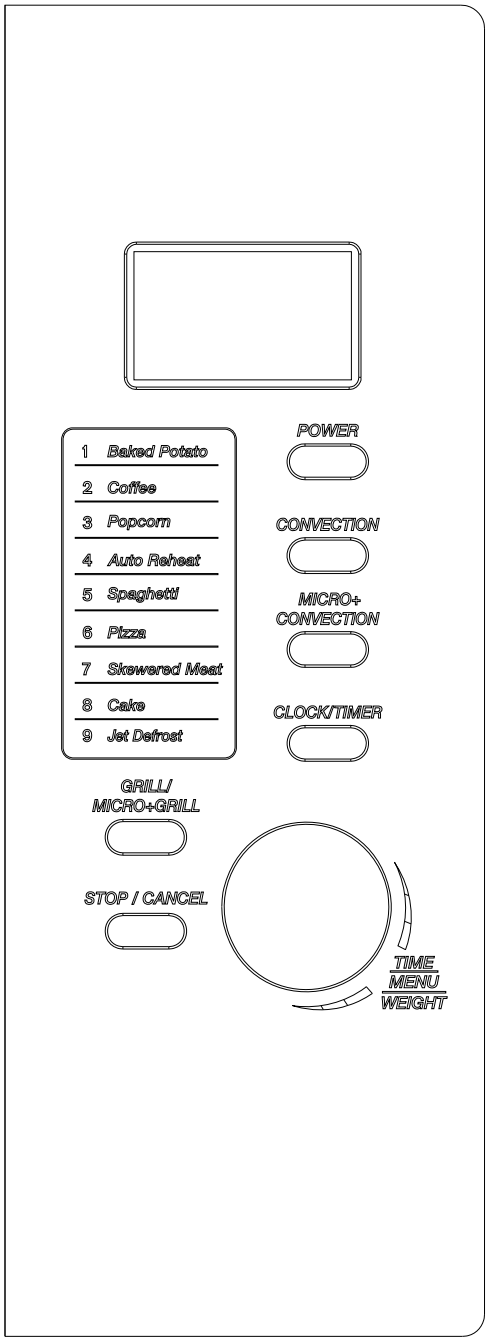

- LED DISPLAY SCREEN
  - Cooking time, power, action indicators, and clock time are displayed.
- POWER
  - Touch this button to set microwave cooking power level.
- CONVECTION
  - Press to program convection cooking.
- MICRO+CONVECTION
  - Press to use combination cooking settings.
- CLOCK/TIMER
  - Touch this button to set the oven clock or timer program.
- GRILL/MICRO+GRILL
  - Press this button to set grill cooking mode or one of two combination cooking settings.
- STOP/CANCEL
  - Press to cancel setting or reset the oven before setting a cooking program.
  - Press once to temporarily stop cooking, or twice to cancel cooking altogether.
  - It is also used for setting child lock.
- TIME/MENU/WEIGHT
  - Turn the dial to enter the oven clock time or input cooking time.
  - Rotate to specify food weight or number of servings
  - Turn the dial to select auto-cooking menu.
- START/QUICK START (TIME/MENU/WEIGHT DIAL)
  - Press to start a selected cooking program.
  - Simply press once to start cooking without a selected cooking program on full power. Repeatedly pressing the dial will increase the cooking time.

HOW TO SET THE OVEN CONTROLS

SETTING DIGITAL CLOCK

With the oven is in standby, touch the CLOCK/TIME button once or twice to set the digital clock in 12 or 24 hours cycle.
FOR EXAMPLE: Suppose you want to set the oven clock time to 8:30.

1. In standby mode, press and hold down CLOCK /TIME for 3 seconds to select 24-hour clock. If you want to set the clock 12-hour clock cycle, press CLOCK /TIME again.

2. Rotate the TIME/MENU/WEIGHT dial until the correct hour is displayed.

3. Press CLOCK /TIME button.

4. Rotate the TIME/ MENU/WEIGHT dial until the correct minute is displayed.

5. Press CLOCK /TIME to confirm the setting.

NOTE: To check clock time during cooking, press the CLOCK /TIME button once, the time will be displayed.

SET THE TIMER

Your microwave oven can be used as a stand alone kitchen timer. Use the timer for timing up to 95 minutes. After the time has expired the oven will beep once.

1. Press CLOCK /TIME once.
2. Turn TIME/ MENU/WEIGHT dial to enter the time.
3. Press START/QUICK START.

MICROWAVE COOKING

To cook with microwave power alone, press the POWER button to select a cooking power level, and then use the TIME/ MENU/WEIGHT dial to set a desired cooking time. The longest cooking time is 95 minutes.
Select power level by pressing the POWER button:

Press POWER Pad	Power (Display)
Once	100%(P-HI)
Twice	90%(P-90)
3 times	80%(P-80)
4 times	70%(P-70)
5 times	60%(P-60)
6 times	50%(P-50)
7 times	40%(P-40)
8 times	30%(P-30)
9 times	20%(P-20)
10 times	10%(P-10)
11 times	0% (P-00)

For example, suppose you want to cook for 1 minute at 60% of microwave power.

1. Place food into oven and close it.

2. Press POWER button 5 times.

3. Turn TIME/MEUNU/WEIGHT to 1:00.

4. Press START/QUICK START button.

NOTE: You can check the power level during cooking process by touching POWER.

QUICK START

This feature allows you to start cooking immediately.
In standby mode, press the TIME/MENU/WEIGHT dial and the microwave starts working at full power level immediately. Repeatedly press this button to increase the cooking time. The longest cooking time you can set is 10 minutes.

GRILL/MICRO+GRILL

GRILL/MICRO+GRILL Cooking has three cooking mode: Grill, Combination 1, and Combination 2. You can press the GRILL/MICRO+GRILL button to select one. The longest cooking time is 95 minutes.

Combination 1(CO-1): 30% of time for microwave cooking, 70% for grill cooking.

Combination 2(CO-2): 55% of time for microwave cooking, 45% for grill cooking.

FOR EXAMPLE: Suppose you want to set combination 1 cooking for 25 minutes.

1. Place food into oven and close it.
2. Press GRILL/MICRO+GRILL button twice.
3. Turn TIME/MENU/WEIGHT to 25:00.
4. Press START/QUICK START button.

CONVECTION

During convection cooking, hot air is circulated throughout the oven cavity to brown and make crisp foods quickly and evenly, in the same way as a traditional oven. This oven can be programmed for ten different cooking temperatures. The maximum cooking time is 9 hours and 30 minutes.

To Cook with Convection

To cook with convection**,** press Convection button and then enter the desired convection temperature. (110~200℃)

Suppose you want to cook at 180℃ for 40 minutes.

1. Place the food inside the oven and then close the door.
2. Press the CONVECTION button repeatedly to select 180℃.
3. Turn the TIME/MENU/WEIGHT to enter cooking time.
4. Press START/QUICK START button to start.

NOTE: You can check the convection temperature while cooking is in progress by pressing the CONVECTION button.

To Preheat and Cook with Convection

Your oven can be programmed to combine preheating and convection cooking operations.
Suppose you want to preheat to 170° and then cook 35 minutes.

1. Press CONVECTION button repeatedly to select 170°.
2. Press START/QUICK START button to start.
3. When the set temperature has been reached the oven will beep and the LED will display the temperature.
4. Open the door and place food at the centre of the turntable. Then close the door.
5. Turn the TIME/MENU/WEIGHT dial to enter cooking time.
6. Press START/QUICK START button to start.

MICRO+CONVECTION

This oven has four pre-programmed settings that make it easy to cook with both convection and microwave heat.

Press MICRO+CONVECTION button to program convection temperature:

	Touch	Temperature(℃)
COMB1	Once	200
COMB2	Twice	170
COMB3	3 times	140
COMB4	4 times	110

Suppose you want to cook for 24 minutes on COMB3.

1. Open the oven door, place the food inside and close the door.
2. Press MICRO+CONVECTION button 3 times to enter 140℃
3. Turn the TIME/MENU/WEIGHT to enter cooking time.
4. Press START/QUICK START button to start.

NOTE: You can check the convection temperature while cooking is in progress by pressing the COMBINATION button. Maximum cooking time is 9 hours and 30 minutes.

AUTO COOK

For some programmes, in the middle of the cooking time the cooking programmer pauses and beeps to remind you to open the door and check the food and turn it over; but be careful to handle with care as the food in the oven will be hot! To resume cooking, just close the door, and press START/QUICK START the oven will cook for the remaining time.

For example: to cook 400g of meat.

1. In standby mode, place food into oven and close the door.

2. Turn TIME/MENU/WEIGHT dial to choice the Code 07.

3. Press START/QUICK START button.

4. Turn TIME/MENU/WEIGHT dial to indicate a weight of 400g.

5. Press START/QUICK START button.

Auto Cook Menu

Code	Food/cooking mode	Note:
01	Baked Potato (each 230g)	The result of auto cooking depends on factors such as the shape and size of food, your personal preference, and where you happen to place food in the oven. For coffee parameters are not food weight but number of servings (as indicated). *Add boiled water before cooking. For grilled chicken, beef/mutton and skewered meat, beeps can be heard during cooking to remind user to turn over the food for uniform cooking.
02	Coffee (200ml/cup)	
03	Popcorn (100g)	
04	Auto Reheat (g)	
05	Spaghetti (g) *	
06	Pizza (g)	
07	Skewered Meat (g)	
08	Cake (475g)	
09	Jet Defrost	See next page.

JET DEFROST

FOR EXAMPLE: Suppose you want to defrost frozen food for 10 minutes.

1. Place the food inside and close the door.

2. Rotate TIME/MENU/WEIGHT dial to choose Code 09.

3. Press START/QUICK START button.

4. Turn the TIME/MENU/WEIGHT to enter cooking time.

5. Press START/QUICK START button.

NOTE: Maximum defrost time is 45 minutes.

MULTI-STAGE COOKING

Your oven can be programmed for up to 3 automatic cooking sequences.
Suppose you want to set the following cooking program.

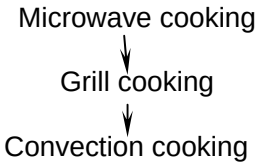

1. Open the oven door and place the food, close it.
2. Press POWER button a number of times till the screen show the intended power.
3. Turn the TIME/MENU/WEIGHT enter cooking time.
4. Press GRILL/MICRO+GRILL button.
5. Turn the TIME/MENU/WEIGHT to enter cooking time.
6. Repeatedly press CONVECTION button to set the cooking temperature.
7. Turn the TIME/MENU/WEIGHT to enter cooking time.
8. Press START/QUICK START button to start.

NOTE : Auto cook “Jet defrost” programme cannot be set in a multi-stage cooking program.

CHILD LOCK

Use to prevent unsupervised operation of the oven by children. The CHILD LOCK indicator will show up on display screen, and the oven can not be operated while the CHILD LOCK is set.
To set the CHILD LOCK: Press and hold the STOP/CANCEL button for 3 seconds, a beep sounds and lock indicator lights.
To cancel the CHILD LOCK: Press and hold the STOP/CANCEL button for 3 seconds until lock indicator on display goes off.

AUTOMATIC PROTECTION MECHANISM (ERROR CODES)

If the oven senses an error it will stop working and display an error code. If you see one of the below error codes you should stop using your appliance. You can leave the door closed and leave your food inside, and there is no need to unplug your appliance. Please wait for the microwave to return to normal working order. When the microwave has returned to normal working condition it will stop beeping and the error code will disappear. You can then use your appliance

NOTE: You may need to reprogram the cooking programme you were using.

1. If the system enters into super high temperature protection status, the digital display shows “E01” and continues to beep until the system comes back to normal condition.

2. If the system enters into super low temperature protection status, the digital display shows “E02” and continues to beep till the system comes back to normal condition.

3. The system enters into protection mode when the system sensor is Short Circuited. The display shows “E03” and continues to beep until pressing “STOP/CANCEL” button. Call consumer service to check and replace the faulty sensor.

COOLING FEATURE

The controlling system of the microwave oven has the feature of cooling. As for any cooking mode which cooking time above 2 minutes, after finishing cooking, the oven fan will continue to work for about 3 minutes to cool the oven.

If the error codes 1 or 2 are still present after 30 minutes you should turn off the appliance and contact Customer Services. Please note that a faulty electrical connection or inadequate provision for ventilation is the responsibility of the owner.

CLEANING AND CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe both sides of the door and window, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaners.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. This is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
9. Remove odours from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
11. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
12. When the microwave oven with grill function is first used, it may produce slight smoke and smell. This is a normal phenomenon because the oven is made of a steel plate coated with lubricating oil, and the new oven will produce fumes and odour generated by burning the lubricating oil. This phenomenon will disappear after a period of using.

13. **The packaging materials that we use are environmentally friendly and can be recycled.**

14. **Please do not dispose this appliance in the domestic rubbish bin. It should be disposed to the particular disposal centre provided by the local waste authority. Disposal must be carried out in accordance with local environmental regulations for waste disposal.**

Built-in installation instructions:

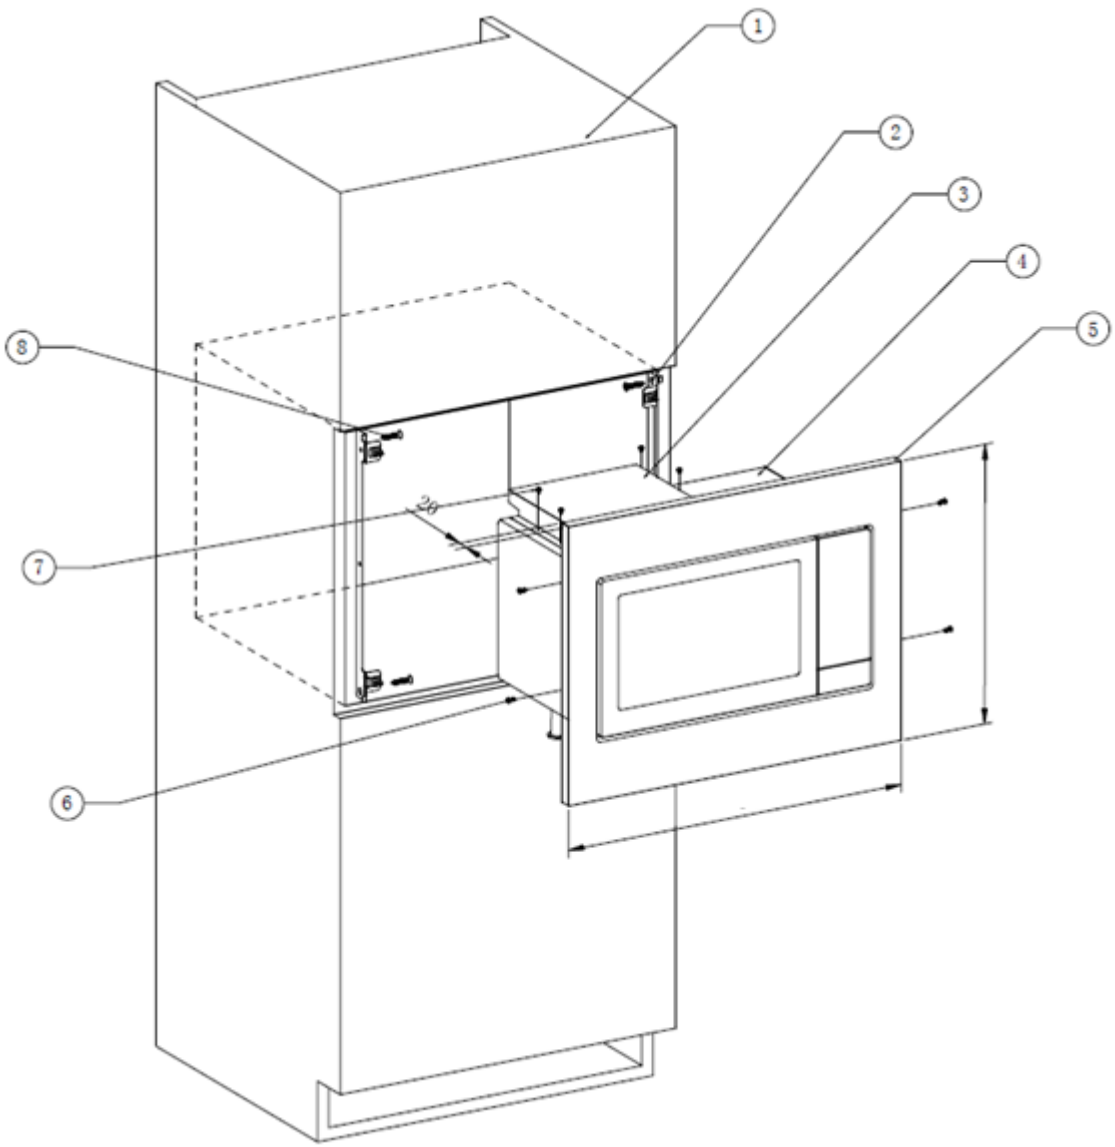

1. Cabinet
2. Frame fastener (x2)
3. Heat channel
4. Microwave oven
5. Frame kit
6. Screw 4x10 (x4)
7. Screw 4x8 (x4)
8. Screw 4x16 (x4)

Make a cut out in the cabinet as per the below dimensions:

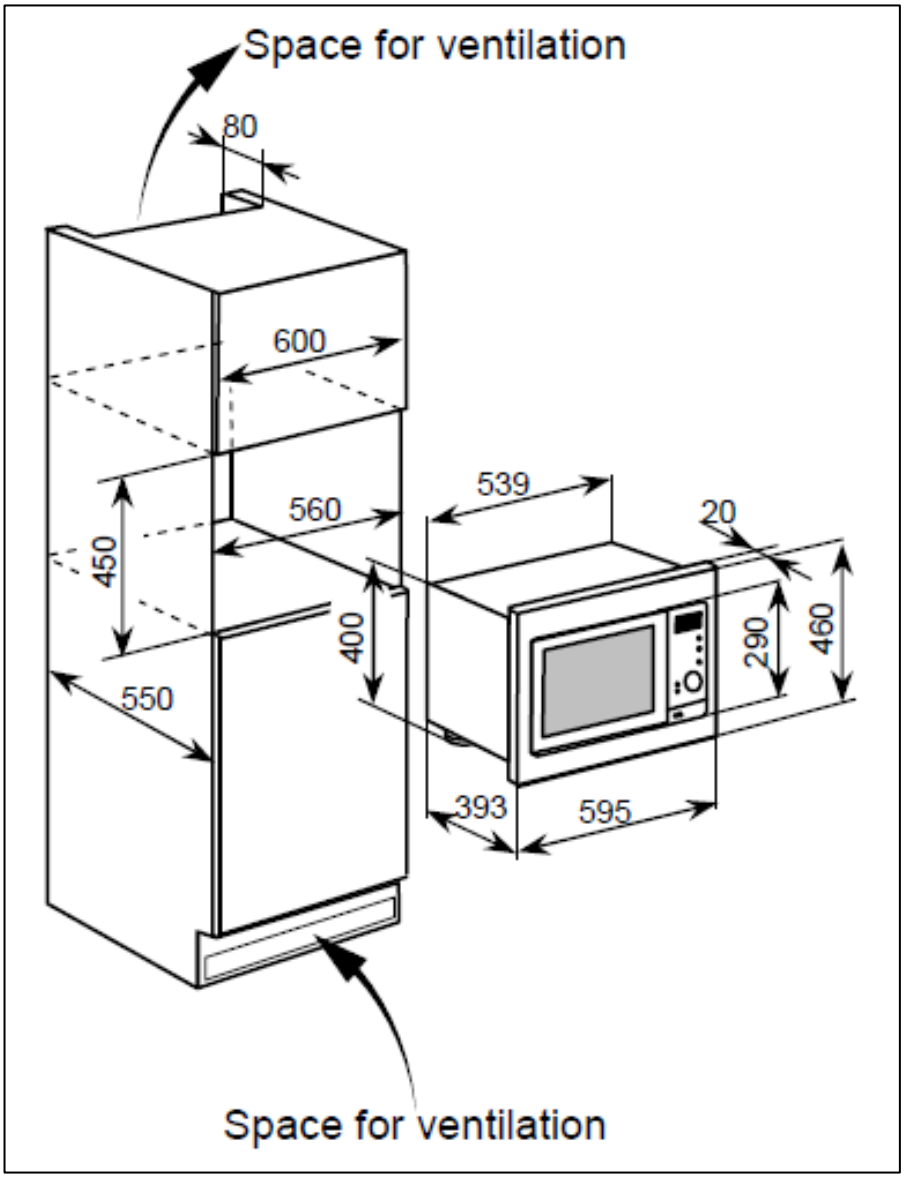

Turn the oven over and place on a cushioned surface. Then attach the feet

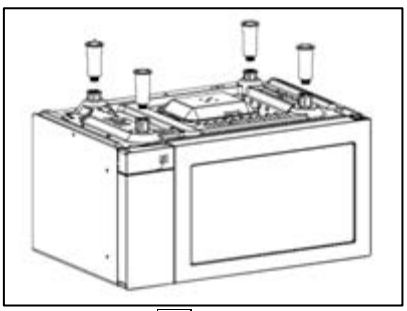

Fasten the heat channel to the top of the microwave using the 4 screws (4x8).

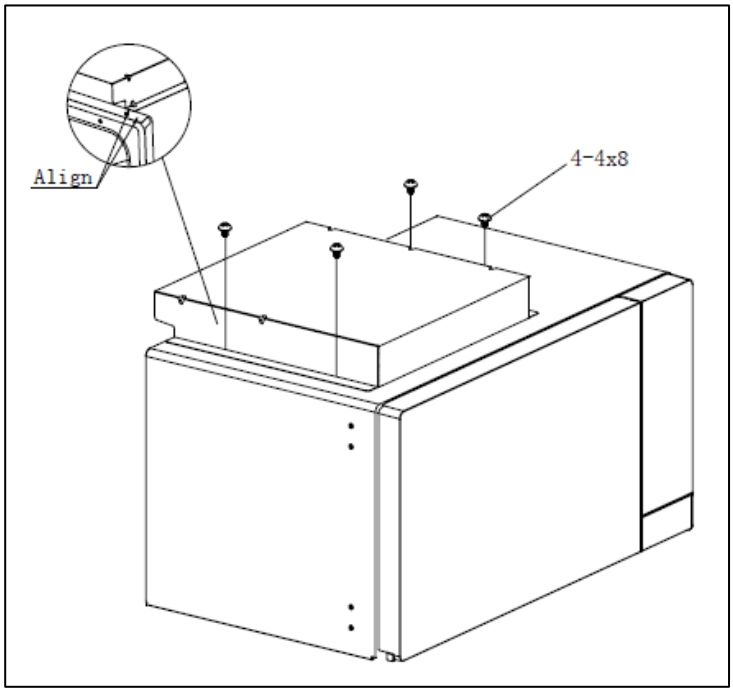

Fasten the frame kit to the front of the microwave using the screws provided (4x10):

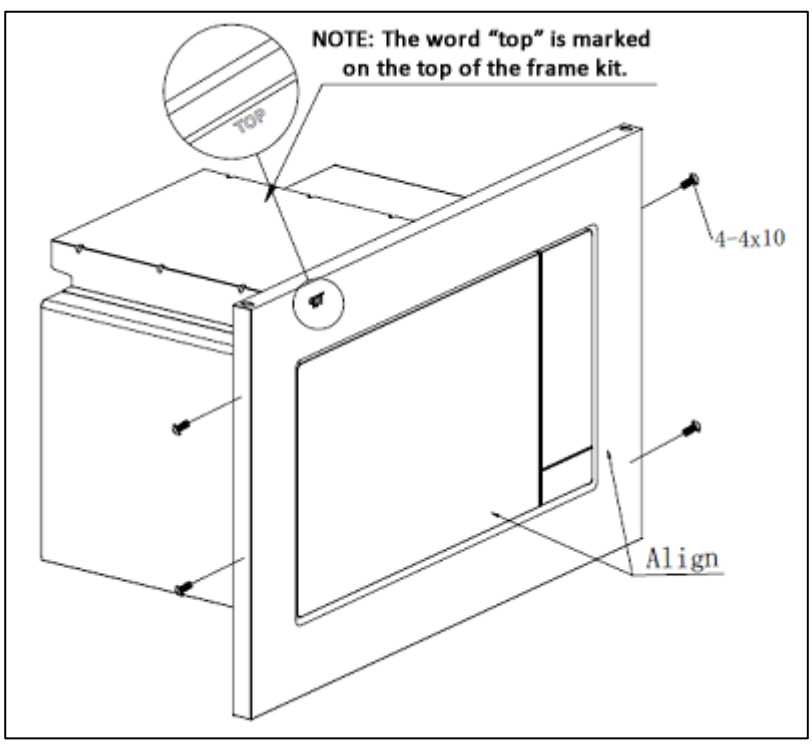

Attach the 2 frame fasteners to the cabinet using the screws provided (4 x 4x16)

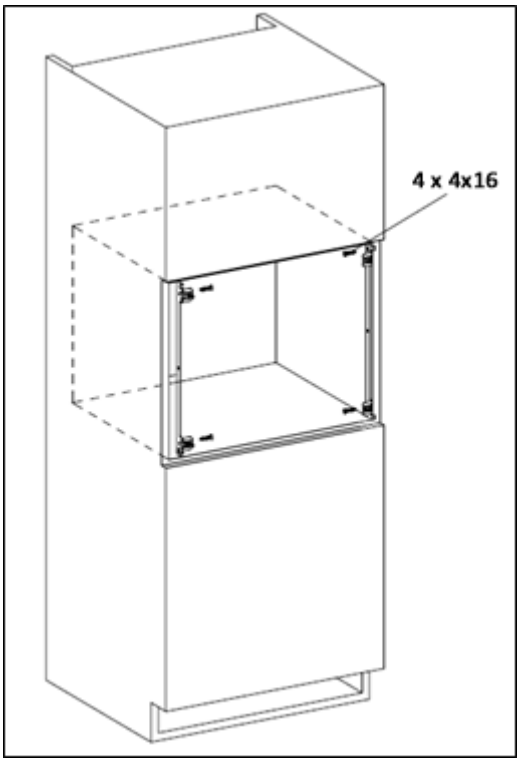

Install the microwave into the aperture, ensuring the clips on the frame kit secure to the frame fasteners. You can adjust the feet to aid in alignment.

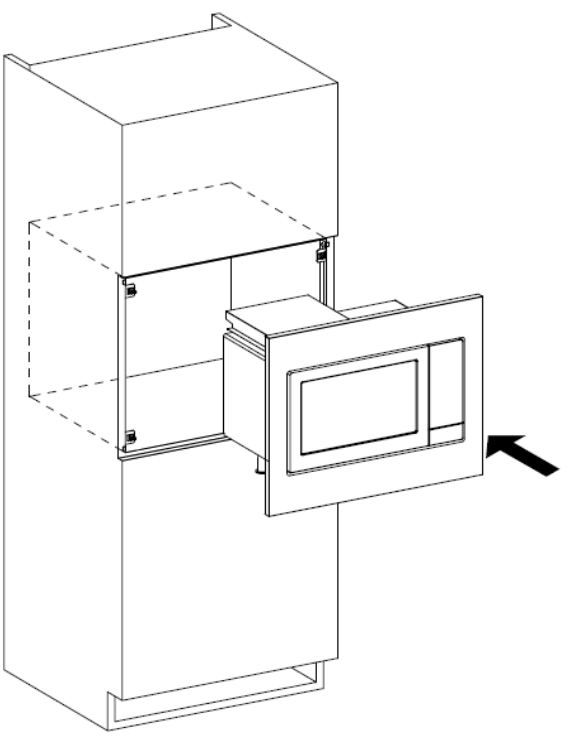

Ensure that the oven is central

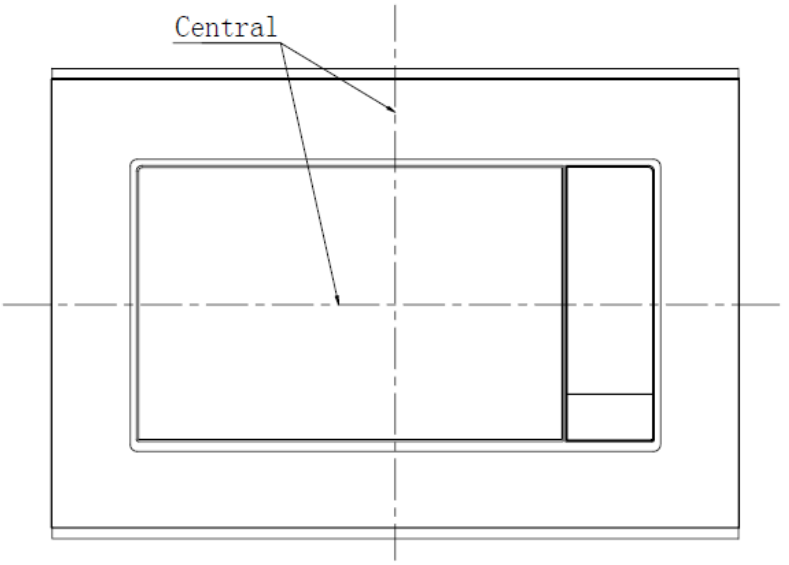

Installation complete.

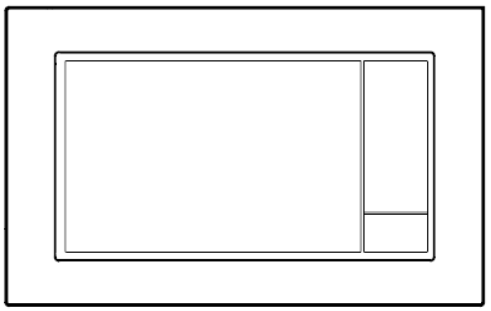

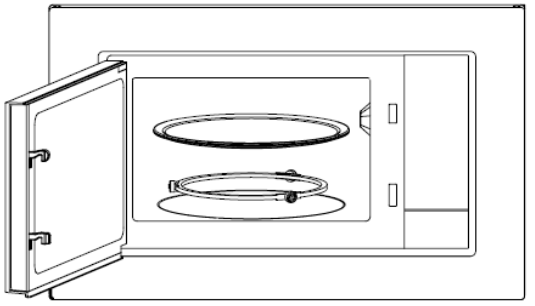

IMPORTANT: If your appliance appears not to be operating correctly, then you should disconnect it from your mains supply and then contact the Customer Care Department.

DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.

Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then they will not complete a repair.

This includes situations where appliances have been tiled in, sealed in with sealant, have wooden obstructions placed in front of the appliance, like plinths. Or any installation other than the one specified by the manufacturer has been completed.

IMPORTANT: The manufacturer operates a policy of continuous improvement and reserves the right to adjust and modify its products without prior notification.

United Kingdom
Baumatic Ltd.,
Baumatic Buildings,
6 Bennet Road,
Reading, Berkshire
RG2 0QX
United Kingdom

Sales Telephone
(0118) 933 6900
Sales Fax
(0118) 931 0035
Customer Care Telephone
(0118) 933 6911
Customer Care Fax
(0118) 986 9124
Spares Telephone
(01235) 437244
Advice Line Telephone
(0118) 933 6933

E-mail:
sales@baumatic.co.uk
customercare@baumatic.co.uk
spares@baumatic.co.uk
technical@baumatic.co.uk

Website:
www.baumatic.co.uk
Facebook:
www.facebook.com/baumatic.uk

Republic of Ireland

Service Telephone
1-890 812 724

Spares Telephone
091 756 771

Czech Republic
Baumatic CR spol s.r.o.
Lípovà 665
460 01 Liberec 4
Czech Republic

+420 483 577 200
www.baumatic.cz

Slovakia
Baumatic Slovakia, s.r.o.
Panenská 34
811 03 Bratislava - Staré Mesto
Slovakia

+421 255 640 618
www.baumatic.sk

Germany
+49 (0) 5223 99408 0
www.baumatic.de

Italy
Baumatic Italia S.R.L.
Via Galvani N.3
35011 Campodarsego (PD)

+3904 9920 2297
www.baumatic.it

Holland
Baumatic Benelux B.V.
Dukdalfweg 15d
1332 BH ALMERE
Nederland

+31(0)36 549 1553
www.baumatic.nl